



Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).


## 24GHz Loss vs Dew Point

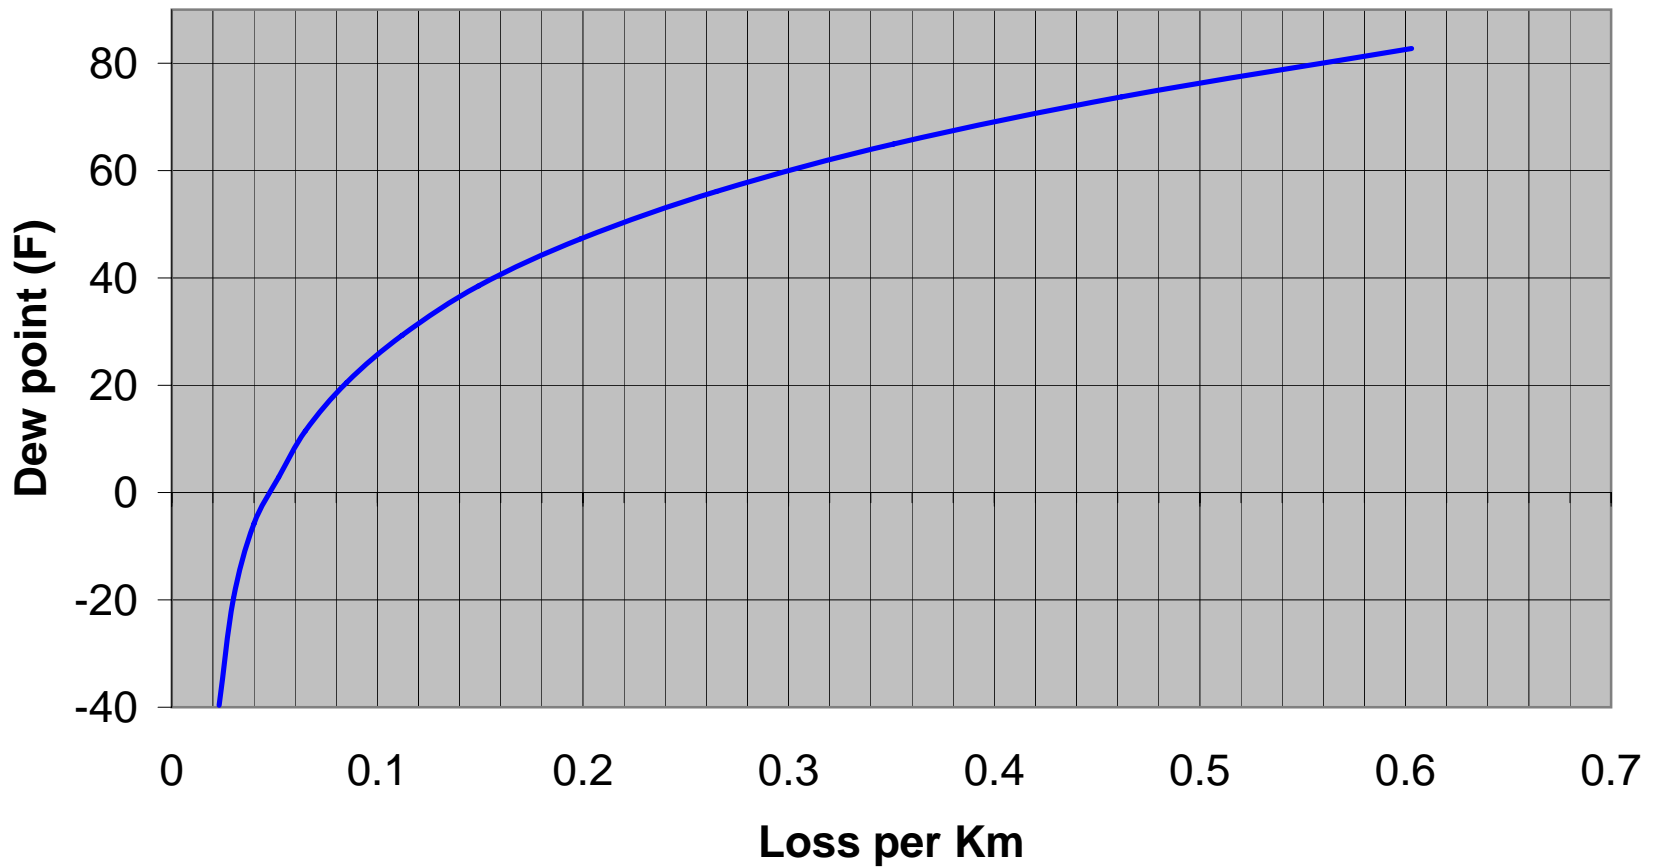


Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

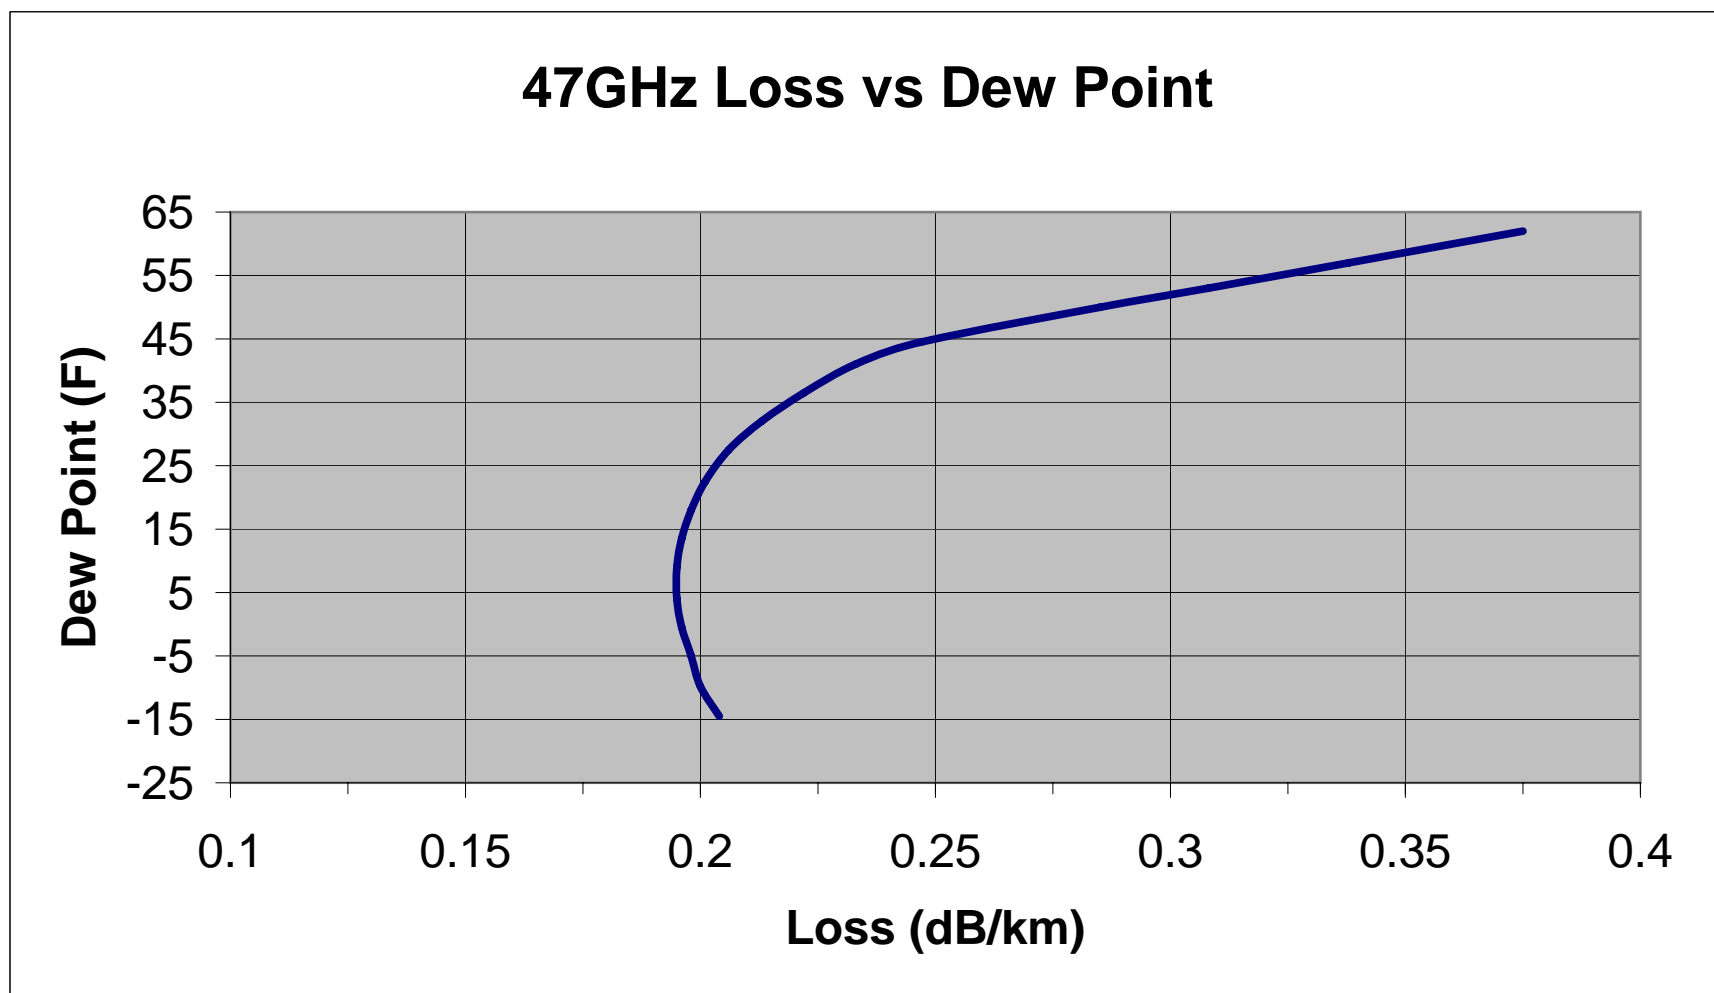


Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

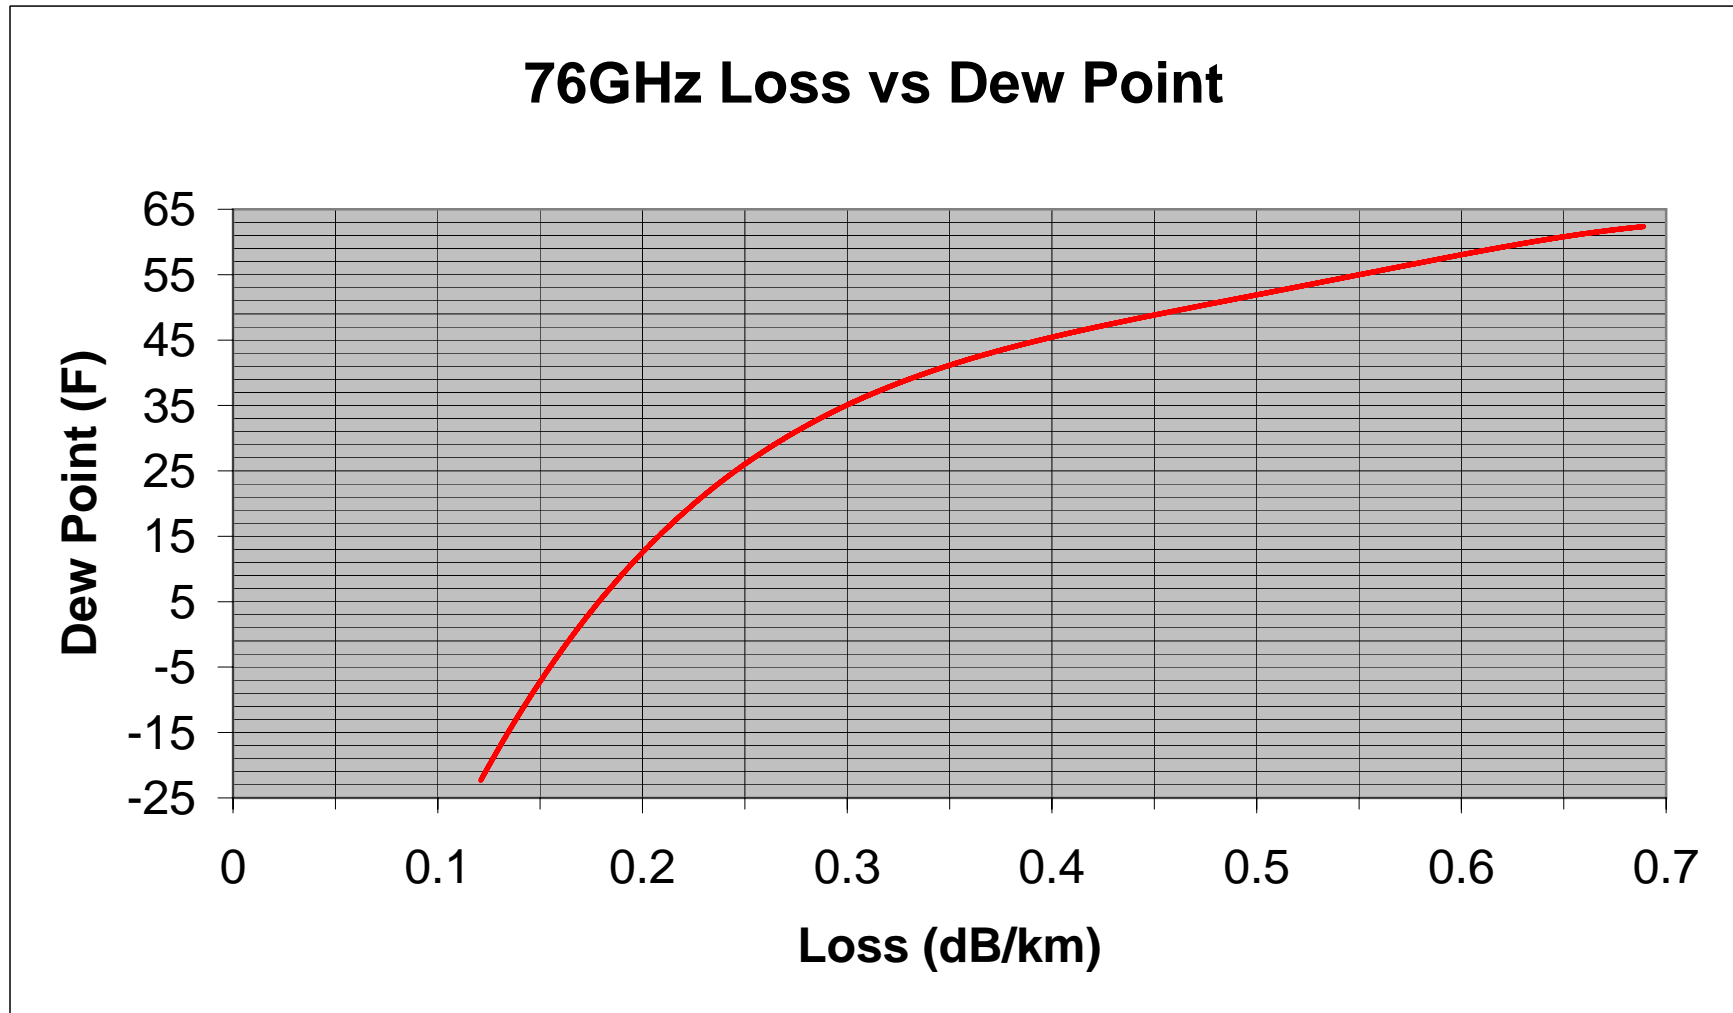


Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

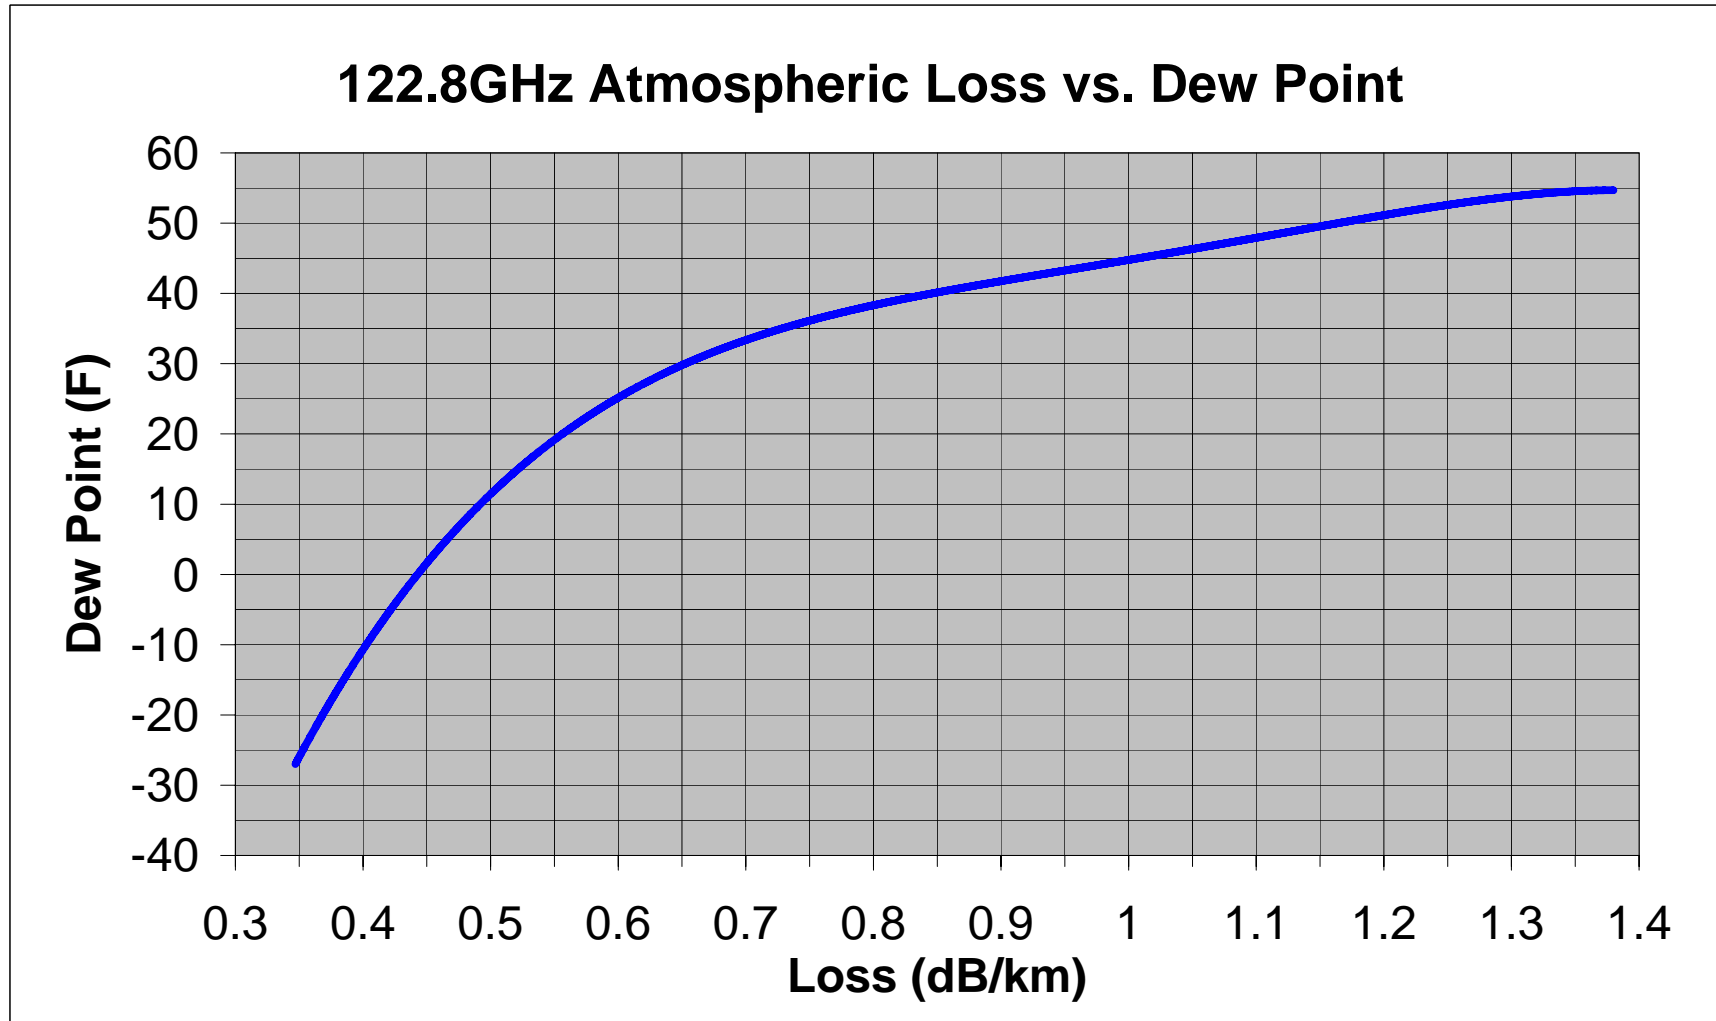


Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

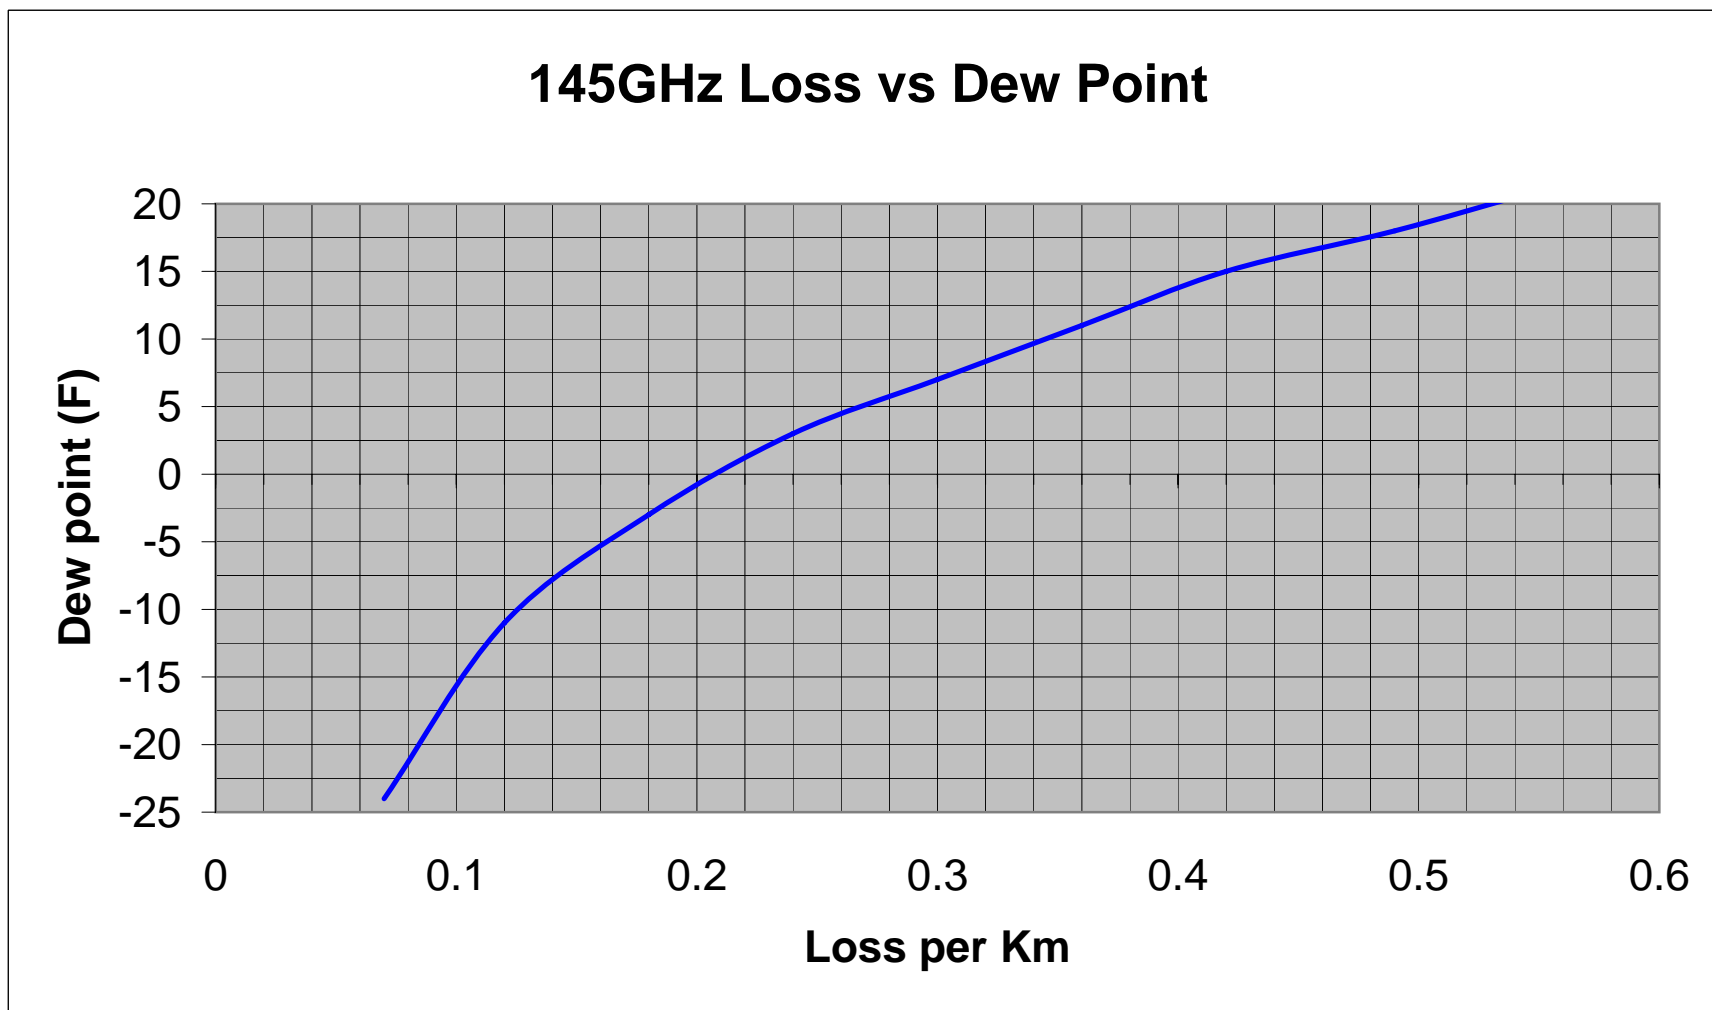

Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

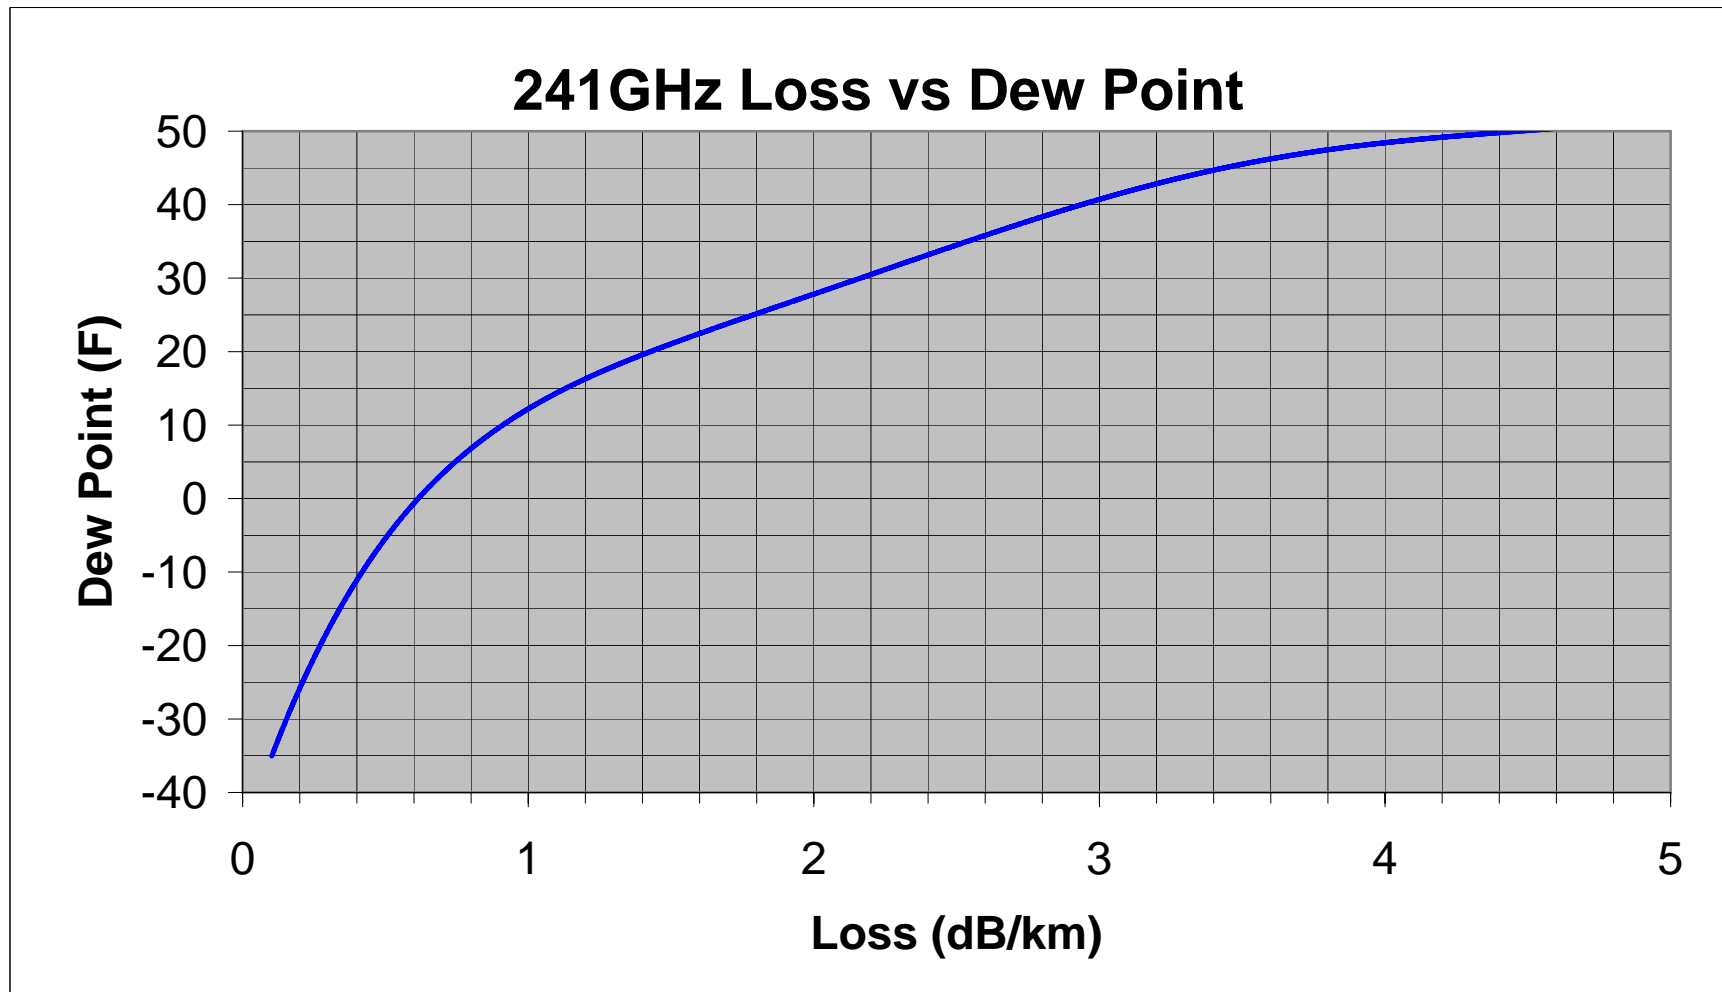

Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

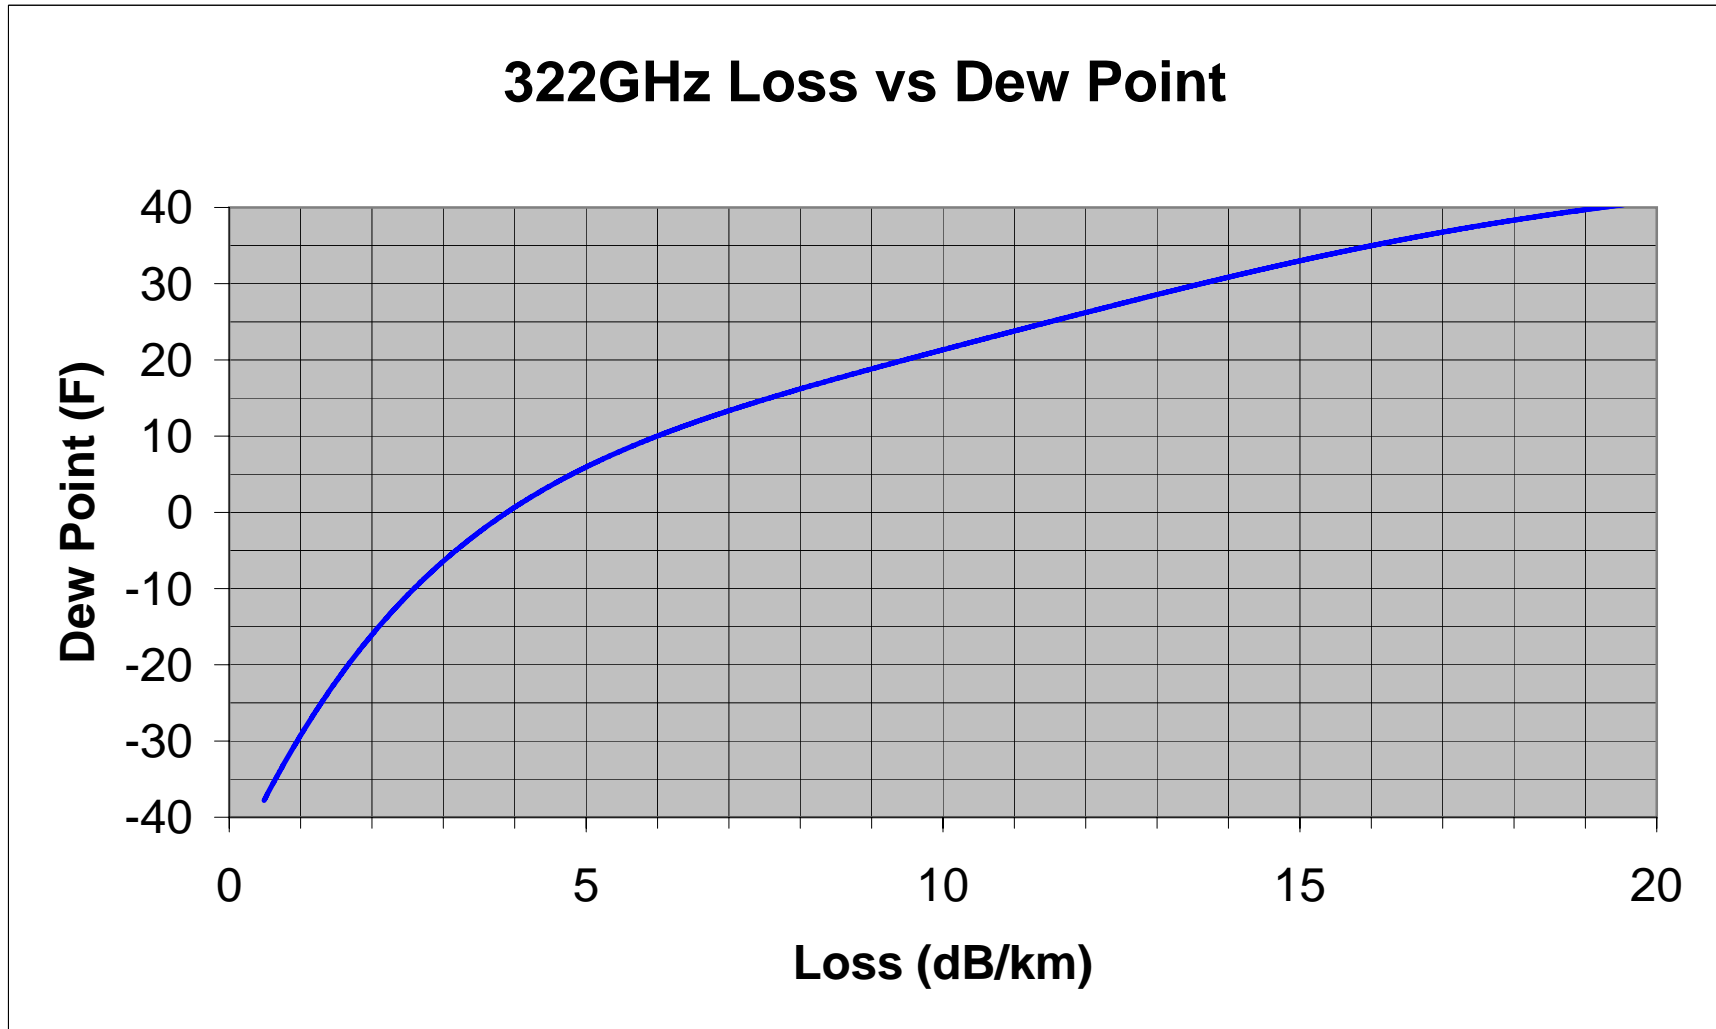

Path Loss Charts. This path loss is ONLY the part due to atmospheric attenuation/absorption. Based on Lieb formulations  
Prepared by Brian Justin WA1ZMS. Calculated for Sea Level (standard pressure).

